

Explosive view

P1 Mk7, K100 Mk7

- 1-Polymer frame housing
- 2-Insert
- 3-Slide
- 4-Barrel
- 5-Trigger guard
- 5.1-
- 5.2-
- 6-Trigger
- 7-Hammer
- 8-Slide stop
- 9-Sear
- 10-Ejector
- 11-Rolling cross pin
- 12-Recoil spring guide
- 13-Autosafety
- 14-Firing pin
- 15-Rear sight
- 16-Front sight
- 17-Extractor
- 18-Magazine release
- 19-Trigger tube
- 20-Magazine catch
- 21-Trigger bar
- 22-Safety lever left/right
- 23-Safety pin
- 24-Arrest clench
- 25-Trigger bar pin
- 26-Hammer catch spring

- 27-Trigger bar pin
- 28-Slide stop spring
- 29-Extractor fixate pin spring
- 30-Trigger spring
- 31-Magazine catch spring
- 32-Autosafety spring
- 33-Hammer spring
- 34-Firing pin spring
- 35-Slide plate
- 36-Recoil spring
- 37-Magazine catch pin
- 38-Slide plate fixate pin
- 39-Trigger pin
- 40-Extractor fixate pin
- 41-Front sight pin
- 42-Autosafety lever pin
- 43-Hammer catch pin
- 44-Hammer pin
- 45-Hammer spring support pin
- 46-Slide catch pin
- 46a-Spring of firing pin
- 47-Pin of firing pin
- 48-Autosafety lever
- 49-Extractor spring
- 51-Distance column
- 52-Firing spring back-up
- 53-Rear sight screw

